


Montageanleitung Paketwagen-Postverteilwagen - KM9000

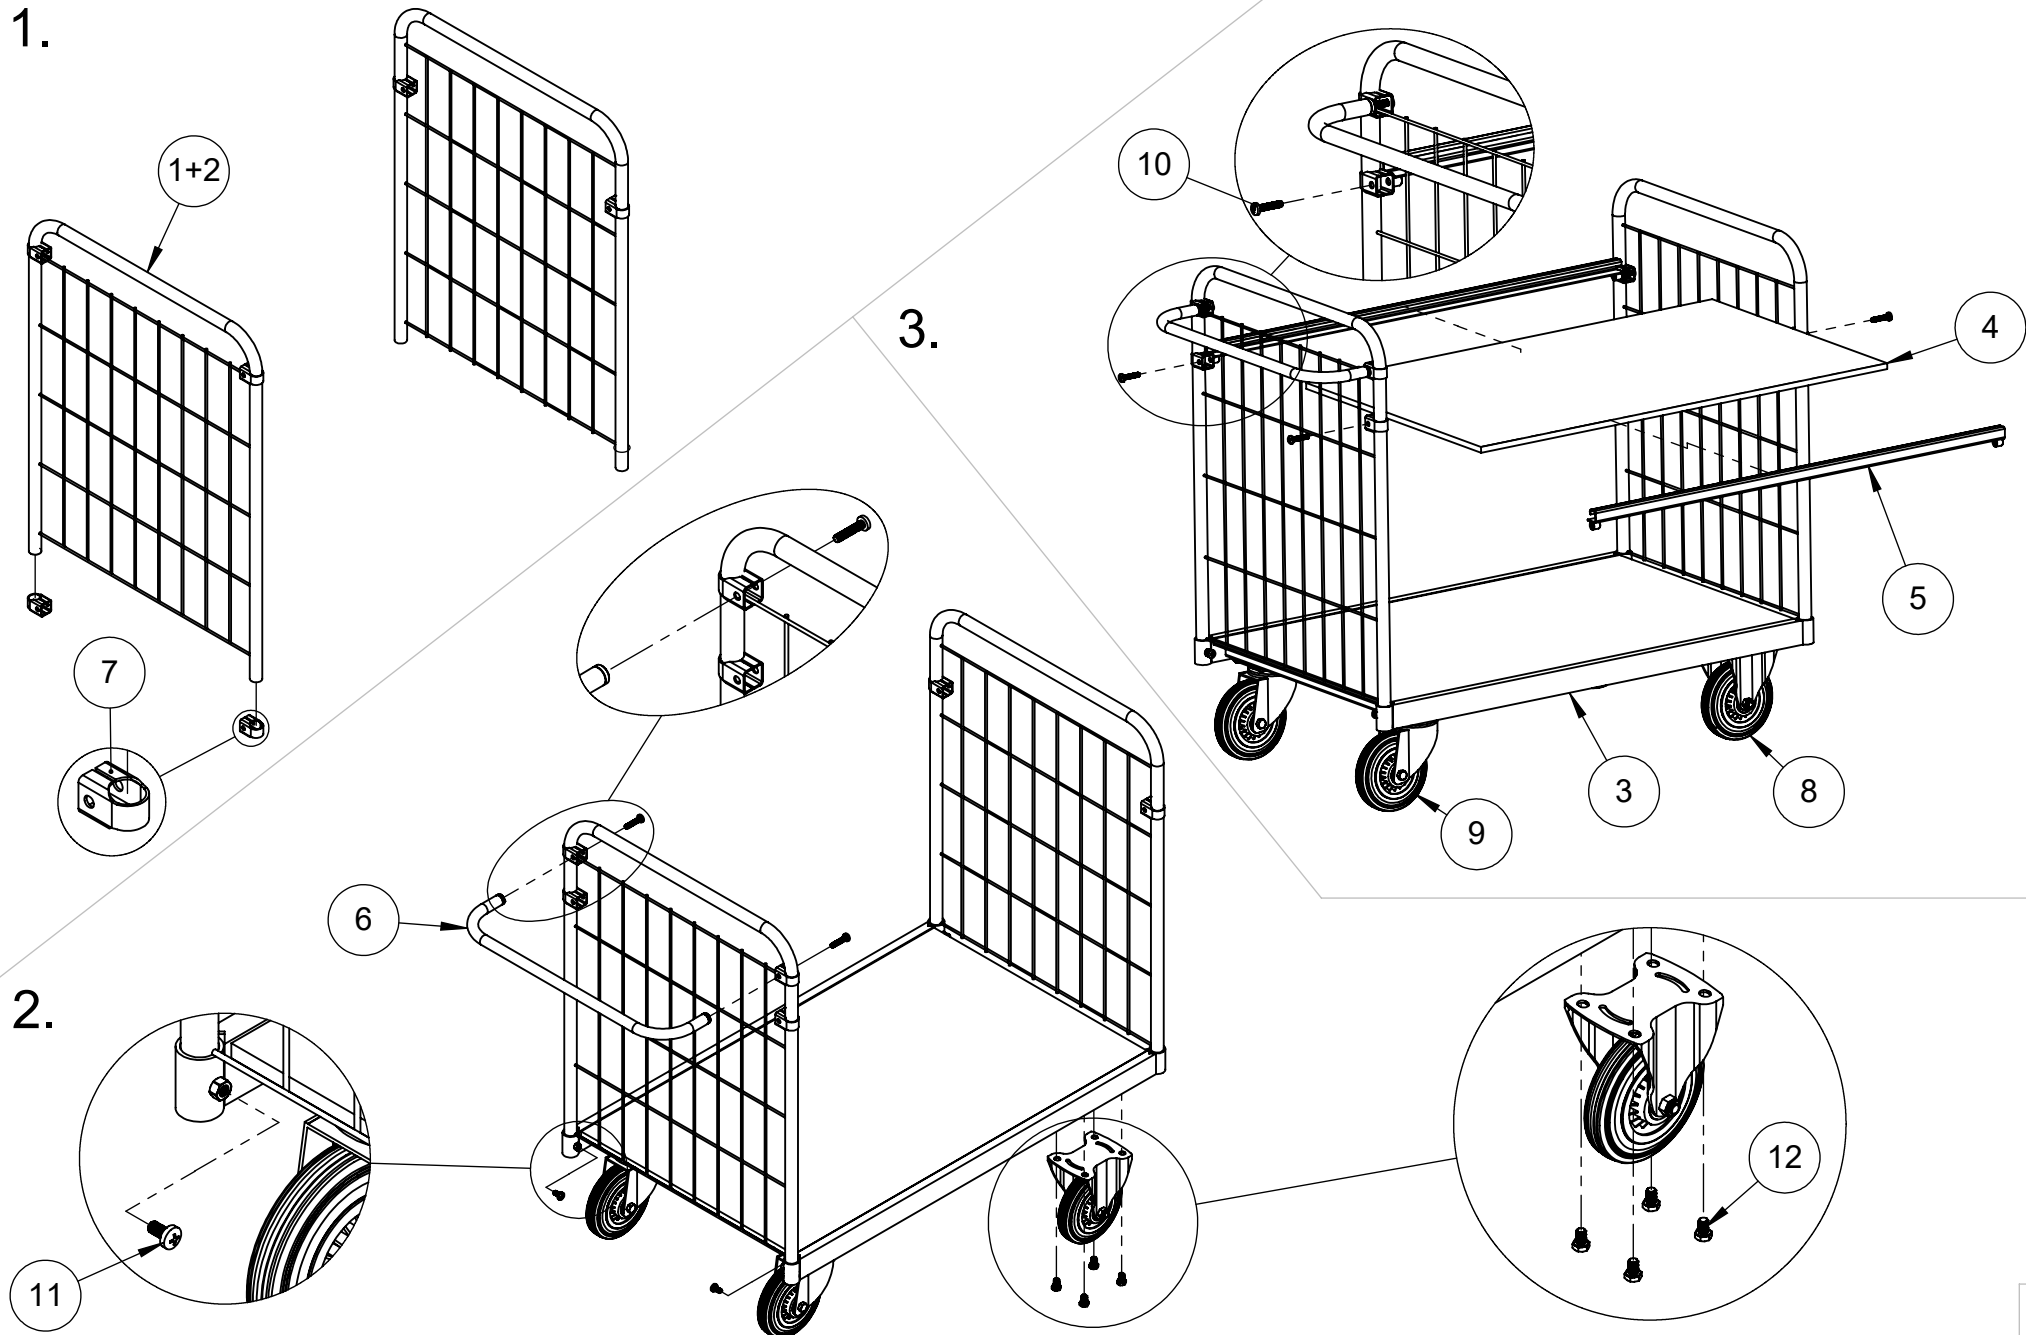


KM9000


KM9000-2









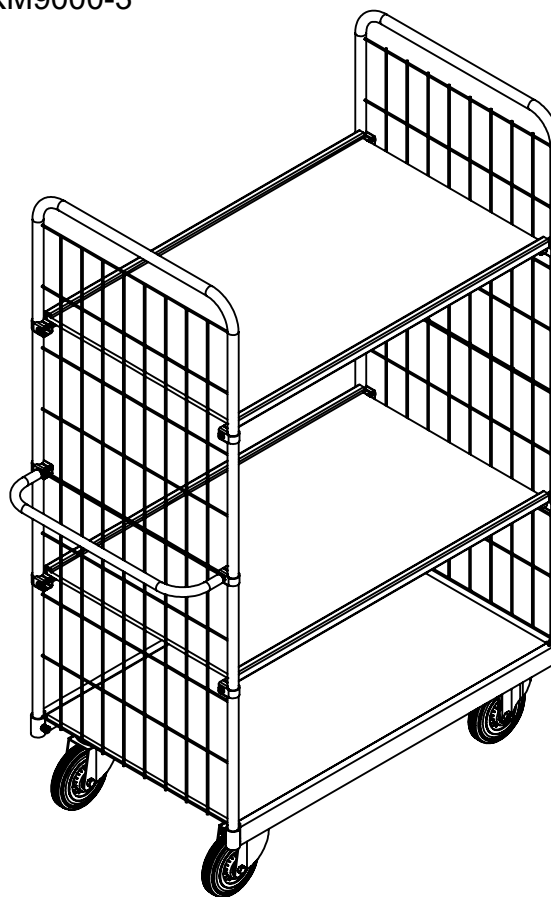

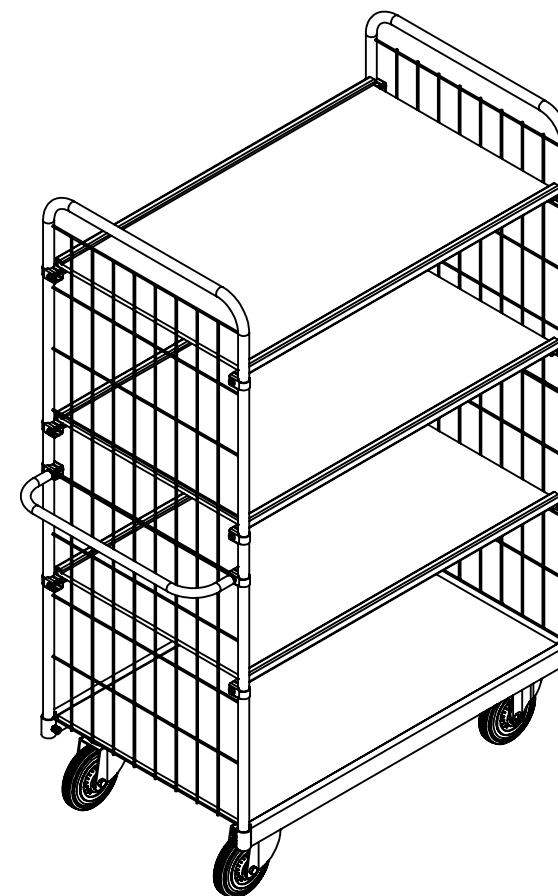


KM9000-3

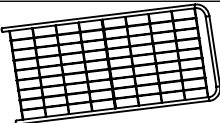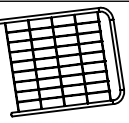

KM9000-4



	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.
Art nr:												
								Ø160	Ø160	M8x40	M8x16	M10x16
KM9000-2		2x	1x	1x	2x	1x	6x	2x	2x	6x	4x	16x
KM9000-3	2x		1x	2x	4x	1x	10x	2x	2x	10x	4x	16x
KM9000-4	2x		1x	3x	6x	1x	14x	2x	2x	14x	4x	16x